


CONGRATULATIONS ON YOUR PURCHASE OF A "SUPERBAG"!

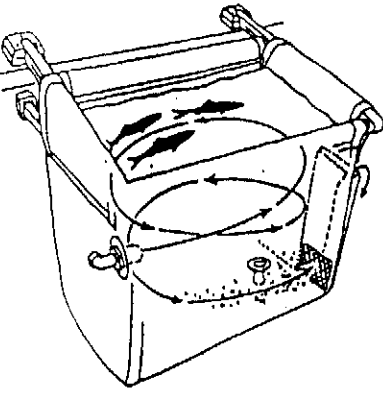

WITH OUR PATENTED, SELF FLUSHING, REVERSE FLOW SYSTEM, YOUR COSTLY BAIT WON'T DIE AS IT DOES IN BOTTOM FILLING LIVE BAIT BAGS, AND THERE ARE NO GROMMET HOLES OR MESH PANELS TO CLOG UP AND CAUSE OVERFLOW.

"CLEAN WATER MAKES THE DIFFERENCE"


PLEASE NOTE: IT IS NORMAL FOR THE BAGS TO LEAK AT THE SEAMS WHEN FIRST USED! THIS DOES NOT AFFECT THE BAG'S PERFORMANCE AND WILL STOP WITH USAGE!

INSTALLATION INSTRUCTIONS:

The SUPERBAG will fit all metal and polyglass brackets available. First insert the brackets into the side sleeves, then put in the rods.

Mounting blocks can be installed on top of the transom, as shown in the drawing above, or on the stern with openings facing upward. Attach blocks with stainless steel 1/4" bolts, nuts and washers (Not included).

AREA NEEDED FOR MOUNTING BLOCKS:

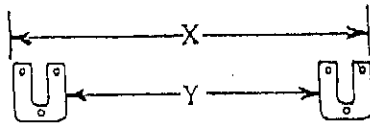

	X	Y
SB-11	19"	14"
SB-14	24"	19"
SB-18	28"	23"
SB-28	28"	23"

Cut off the lower legs to fit your hull's configuration. It is important to install the bumper pads up tight against the bottoms of lower legs to help support the load!

To prevent side sway and possible breakage, the fiberglass rod ends must be held firmly in the bracket rod pockets with the enclosed 1 1/4" screws. The warranty is voided if the bracket assembly is not screwed together!

Either too much or too little water flow will kill baitfish, but as a rule of thumb, tanks up to 20 gallons should fill in from 8 to 12 minutes. Larger tanks take proportionately longer. Many variables, other than a pump's output, will affect water flow; such as hose diameter, distance from tank, flow restrictions, etc. Adjust the inlet petcock valve for the desired flow. If the bag has an inlet cap with two drilled holes, and is filling too slowly, ream them out slightly with a drill until you get the desired flow.

To keep bait alive, healthy, and active, we strongly recommend the following: Use a centrifugal instead of a self priming pump, and restrict the speed of your boat to prevent pounding and injuring them.

Since fresh lively bait catches more and bigger fish, limit the amount you get to 1 1/2 scoops for the SB-28 (AW-800), 1 scoop for the SB-18 (AW-810), 1/2 scoop for the SB-14 (AW-820), and 1/2 scoop for the SB-11 (AW-820) SUPERBAGS.

OPTIONAL ACCESSORIES:

SBC-15 (AW-950) SUPERBAG COVER. Fits brackets for 15" wide bait bags (All brands).

SBC-20 (AW-940) SUPERBAG COVER. Fits brackets for 20" wide bait bags (All brands).


SBC-24 (AW-930) SUPERBAG COVER. Fits brackets for 24" wide bait bags (All brands).

BB-28 (AW-100) BAIT-BUOY. Floatable insert that fits the SB-28 (AW-800) SUPERBAG only.

BBC-28 (AW-101) BAIT-BUOY COVER. Fitted polyester mesh cover.

AC-5 (AW-355) THRU-TRANSOM CONNECTOR. Garden hose fittings each side.

AC-10 (AW-350) BAIT-LITE. Detachable 12 volt light that attaches to SUPERBAG or BAIT-BUOY cover.

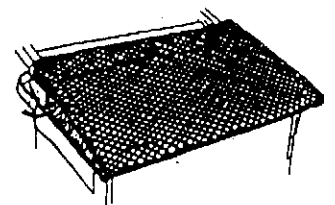

SUPERBAG COVER